


DIMENSIONS (FIG 5)

Powershield - Sleeve should protrude as far as possible into container and at least a minimum of 6mm

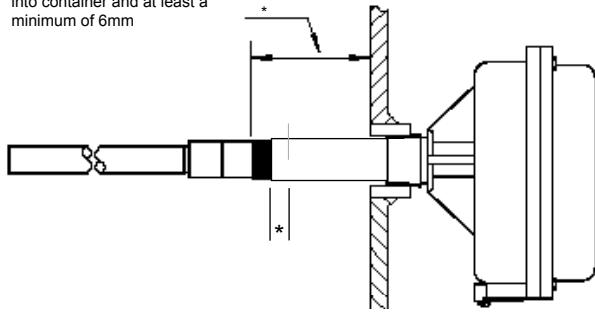

MOUNTING/POWERSHIELD DETAIL (FIG 6)

OVERALL SPECIFICATION - DML4AI

Type:..... **DML4AI**
 ATEX Certificate No:..... **TRAC11ATEX11268X**
 IECEx Certificate No:..... **IECExTRC12.0016X**
 Classification: **Ex II 1(1)D Ex ta[ia] IIIC T100°C Da**
 Tamb= **-20°C to +50°C.**
 Protection: **IP65.**
 Enclosure:..... **Modified Polyamide 66.**
 Mounting:..... **Via 1" BSP Parallel thread.**
 Um:..... **110V/230V ac 50/60Hz or**
 (Supply) **24V dc (Stabilised) (-6% to +2%).**
 Rating: **1.8VA.**
 Relay Terminals - Um: **S.P.C.O 240V.**
 (Output)
 Relay Terminals - Ii: **2.5A non-inductive.**
 Timer Delay: **0 - 60 second variable. (prevents false signalling from splashing). Set via pushbutton.**
 Earth Bonding:..... **Earth stud located on exterior of main case. This stud must be connected to earth, bonded to container or metalwork of container &, if used, connected to exterior of armour cabling.**
 Probe Length:..... ***220mm, 320mm, 1 metre, or 2 metre solid rod or**
 *220mm probe rods are 22mm dia, all other probe rods are 16mm dia.

CE DECLARATION OF CONFORMITY

EQUIPMENT DESCRIPTION : CAPACITANCE LEVEL PROBE

PRODUCT NAME : DIGIMATIC DML4AI

We, the undersigned, on behalf of Synatel Instrumentation Limited, hereby declare the products listed below conform to the relevant provisions of the legislation, as well as pertinent clauses of the standards and other normative documents mentioned herein.

LOW VOLTAGE DIRECTIVE 2006/95/EC

EN61010-1 2010 : Safety requirements for electrical equipment

EMC DIRECTIVE 2004/108/EC

BS EN 61000-6-3 & 6-4 2007 : Electromagnetic Compatibility - General Emission Standard
 BS EN 61000-6-1 & 6-2 2007 : Electromagnetic Compatibility - General Immunity Standard

ATEX DIRECTIVE 94/9/EC

CERTIFICATE No. : TRAC11ATEX11268X
 CLASSIFICATION : Ex II 1 (1) D Ex ta [ia] IIIC T100°C Da
 NOTIFIED BODY : 0891 TRaC Global
 ADDRESS : Unit 1, Pendle Place, Skelmersdale, WN8 9PN, UK


BS EN 60079-0 2012 : Explosive atmospheres.Equipment.General requirements
 BS EN 60079-11 2012 : Explosive atmospheres. Protection by intrinsic safety "i"
 BS EN 60079-31 2014 : Explosive atmospheres .Dust ignition protection by enclosure "t"

RoHS DIRECTIVE

No required or relevant standards

Special Conditions for Safe Use

1. Cable glands used must be at least IP6X approved
2. The enclosure shall be inspected for damage to the nickel coating regularly as part of the maintenance schedule.

SIGNED: 
 NAME: R. ASHBY

DATE: 05/11/2014
 POSITION: CEO

To Order: Specify DIGIMATIC DML4AI + length of probe required

Guarantee

The equipment is covered by a 12 months guarantee from the date of shipment. Any faults arising due to faulty materials or workmanship, within the guarantee period, will be corrected free of charge providing the equipment is returned to us carriage paid.

Health and Safety

Provided that the equipment covered by these instructions is installed and operated as directed, it presents no hazard and conforms fully to health and safety regulations.



**DIGIMATIC
 LEVEL CONTROL
 ATEX/IECEx APPROVED
 type DML4AI**



Introduction

The DIGIMATIC is a fixed point Level Controller incorporating a microcomputer which is used to automatically calibrate the probe to suit the material being detected. Full manual override facilities are included. The unit has full ATEX approval for use in dust hazard installations, such as flour mills, saw mills or any application where dust may be present.

The DIGIMATIC employs a power shield to minimise the effect of material adhering to the probe making it ideal for detecting most materials including sticky or viscous types. It is equally suited to both liquids and solids. The probe may be a solid rod, metal plate or wire rope.

The self contained DIGIMATIC is normally supplied with a loose probe, available as a stainless steel rod in standard lengths of 100mm, 1 metre or 2 metres, or as a 10 metre wire rope suspension probe and weight. The probe should be screwed to the DIGIMATIC. Prior to attachment, the probe length can be reduced or increased, if desired, but see notes a) and b) regarding minimum surface area.

Connections

* IMPORTANT *

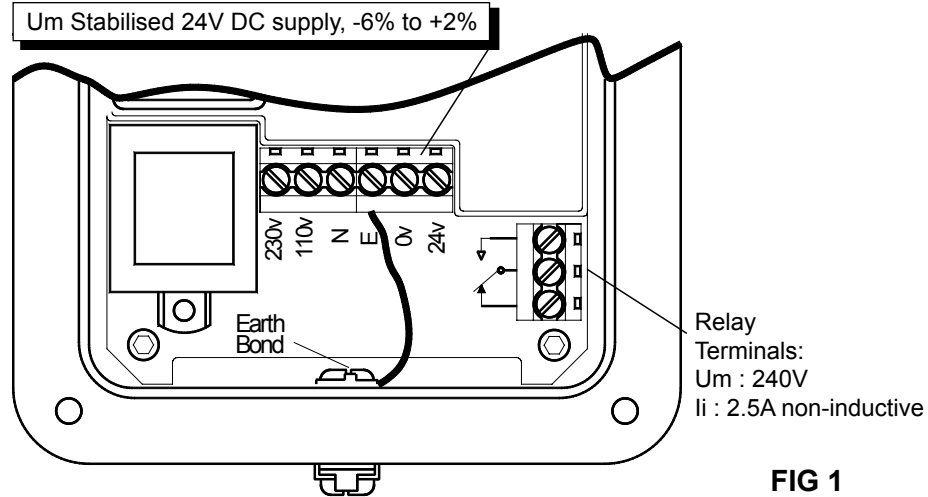


FIG 1

Installation

A thread locking compound is already applied to the probe fixing stud of the DIGIMATIC. This will prevent the probe rod from vibrating loose. Once fitted, the compound is fully hardened after 20 minutes.

DIGIMATIC will operate on 110V/230V ac 50/60Hz or 24V dc supplies (Um). The unit may be wired in ordinary un-screened cable of any length and need not be separated from other cables.

A SUPPLY EARTH IS ESSENTIAL!

When mounting the DIGIMATIC, care must be taken to ensure that the exposed end of the power shield protrudes into the container. See fig. 6. Mount unit securely to minimise vibration.

Connect in accordance with fig 1, and set High/Low switch to required position (see fig 2), ensure that cable gland and back cover are fully tightened when finished. The DIGIMATIC has two 20mm cable entries, one of which is blank, the blank may be drilled out carefully if required; it must not be knocked out. All cable glands must be ATEX approved, IP65 rated. The unit should be wired and earthed in accordance with appropriate Electrical Regulations. The unit must be earthed and the terminal MUST be bonded to the earth bond stud.


On metal containers, unit earth MUST be bonded to the container. If the container is non-metallic, metal flanges or couplings used to mount probe should be bonded to earth. This also applies to probes mounted in wooden or plastic tops of metal bins.

Fail Safe Setting

The "High/Low" switch (fig 2), sets the fail safe mode. In the "High" position, the relay is de-energised with material present. In the "Low" position, the relay is energised with material present. Normally, the "High" position is used for high level probes and the "Low" for low level probes. Intermediate probe settings depend upon individual requirements.

ELECTROSTATIC RISK - Ensure that the enclosure is not subject to charging in end application.

FIG 2

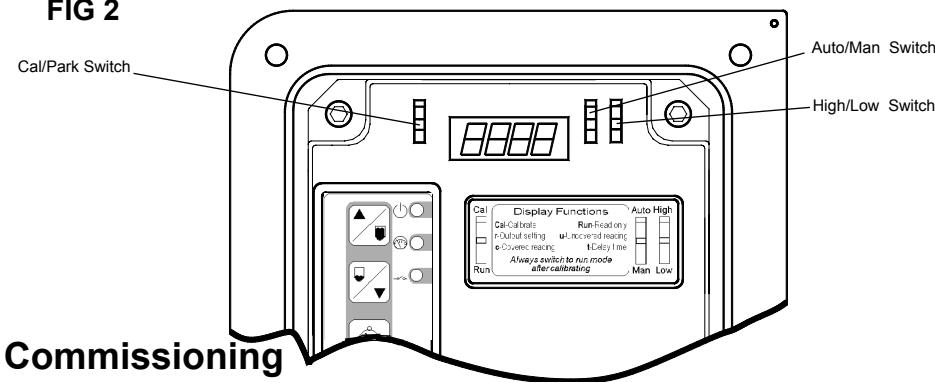


Commissioning

The DIGIMATIC can be calibrated automatically, manually or by a combination of the two methods. Usually, automatic calibration is the simplest method, particularly when the vessel can be filled to cover the probe. Manual calibration is useful when a number of probes in similar applications need to be set. Once the correct calibration has been determined and noted, on one system, the remainder can be set to the same setting.

Display Functions

The display (fig 3) shows a number of different values depending upon whether the unit is in manual or auto mode, and cal or park mode.

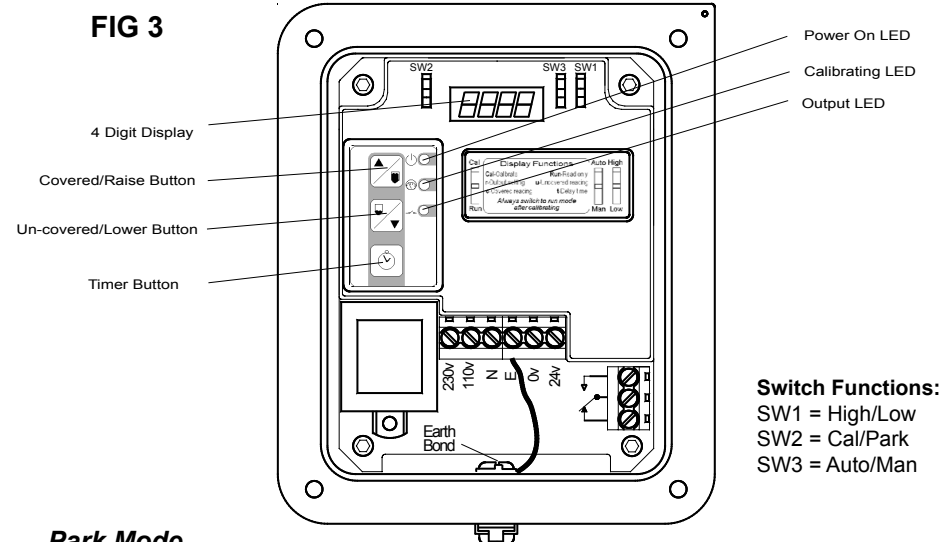

Park Mode

In normal operation the display shows a value representing the capacitance measured by the probe at the time.

Pressing the button will cause the display to show uxxx followed by rxxx. Pressing the button will cause the display to show cxxx followed by rxxx. cxxx is the probe covered value measured during calibration, uxxx is the uncovered value and rxxx is the relay operating point which the Digimatic calculates and is half way between the two measured values.

Note: The settings are "view only" in park mode, they cannot be altered.

Cal Mode - auto/man switch set to auto

In this mode, pressing the button will cause the unit to measure and display the uncovered value and recalibrate the relay operating point if necessary. Pressing the button (with the probe covered) will cause the unit to measure and display the covered value, again recalibrating the relay operating point if necessary.

Cal Mode - auto/man switch set to man

In this mode, pressing the button will cause the display to momentarily display the present relay operating point and then to increment the setting slowly and then rapidly to set a higher operating point. Pressing the button will cause the display to momentarily show the current relay operating point, and then decrement the setting, slowly and then rapidly. Once adjusted in manual mode, any previous settings will be lost. The cxxx reading will be 1 above the relay operating point and the uxxx reading 1 below.

Note: Always return to "Park" (after calibration)

Automatic Calibration - material available

- 1) Set Cal/Park switch to Cal and Auto/Man switch to Auto. The Cal LED will flash.
- 2) Ensure that the probe is uncovered and press and hold the button. The display will show uxxx followed by rxxx.
- 3) Fill the vessel sufficiently to cover the probe and then press the button. Display will show cxxx followed by rxxx.
- 4) Return the Park/Cal switch to park. The unit is now calibrated. uxxx & cxxx values can be viewed but not altered by pressing the & buttons.

Semi Automatic Calibration - material not available

- 5) Follow steps 1 & 2 above.
- 6) Set Cal/Park switch to Park and press the button. Note the uxxx reading but ignore the rxxx reading. Return the Cal/Park switch to Cal and set the Auto/Man switch to Man.
- 7) From the table below, select the nearest material to the type to be detected and add the value to the uxxx reading determined in (6).
- 8) Press the button to raise the reading and the button to lower the reading to achieve the calculated setting.
- 9) Return the Cal/Park switch to Park and press the & buttons to confirm that the relay operating point rxxx is correctly set. The uxxx & cxxx settings will be one below and one above the readings.

Table of Typical Settings	
Material Type	Increment
Light	+15
Medium	+30
Heavy	+60 or greater

Time Delay

The DIGIMATIC has an adjustable delay from 0 to 60 seconds, the timer operating on both material arriving and leaving. To set the time delay, proceed as follows.

- 10) Set the Cal/Park switch to Cal.
- 11) Press and hold the button. The display will show t000 which increments from zero and adds one second each time the button is pressed. Release the button when the required delay time is shown.
- 12) Return the Cal/Park switch to Park and press to confirm the timer setting.
- 13) The timer can be altered to a longer or shorter delay by repeating the procedure from 10) above.

NOTES:-

- a) The DIGIMATIC sensitivity is proportional to the surface area of the probe. When using a 16mm dia. probe the minimum length to use, for the majority of materials, is 200mm. This should be treated as the minimum if possible.

If the probe length needs to be reduced to less than 200mm, the surface area should be maintained. This can be achieved by increasing the diameter, by fitting a metal tube over the probe, or by bending the probe rod. In certain high density materials it may be possible to reduce the length without compensation.

- b) Synatel offer a free product test service. To use this service, supply 2 litres of product in a sealed container (to prevent ingress or loss of moisture), the product will be tested and its suitability confirmed. Your should also notify us of any safety precautions which should be observed during testing. (Supply suitable COSHH datasheet).