

# SYNASPEED MK3 OPERATING MANUAL



DESCRIPTION.....	PAGE
GENERAL INTRODUCTION	1
INSTALLATION - GUIDELINES	2
INSTALLATION - RELUCTANCE SENSOR	2
PROGRAM - FACTORY SETTINGS	5
PROGRAMMING - EXAMPLES	9
PROGRAMMING - HOW'S IT DONE	4
PROGRAMMING - MODIFYING THE PRESET'S	5
PROGRAMMING - PRESET ALLOCATIONS	8
PROGRAMMING - PRESET DETAILS	3
TECHNICAL INFORMATION	6



When this product is incorporated into other machinery or apparatus, that apparatus must not then be put into service (in the E.C) until it has been declared in conformity with the appropriate E.C Directive/s.  
 SYNATEL INSTRUMENTATION Ltd, WALSALL RD, NORTON CANES  
 CANNOCK, STAFFORDSHIRE. WS11 3TB  
 Tel: ( 01543) 277003 \* Fax: ( 01543) 271217

646-002D

>:SYNSPDM3(4)

(4)

mode sequences automatically.

The edit mode is entered by pressing the switch with the power off and then applying power at which time the Software Issue Number will be displayed for one second. The message **SP-01** will then be displayed with 1 highlighted indicating that this can be adjusted. Using the switch, increment this number to select the 1st part of the SP number that you wish to edit . The number will eventually scroll around to 0 so that you can start again if necessary. Approximately four seconds after the last switch depression the 2nd part of the SP number will be highlighted so again select the 2nd part of the SP number you require. The value of the SP number that you selected will be displayed after about four seconds with the least significant digit ( the digit at the right hand end ) highlighted , ready for you to adjust. The Synaspeed will scroll from right to left across all five digits giving you the opportunity to adjust each one in turn. When all five digits have been highlighted, the Synaspeed will revert to displaying the SP number, automatically incrementing to the next one up.

If you do not wish to alter a particular digit simply leave the switch alone and the next digit left will be highlighted after four secs. Entering an SP number of 20 causes the Synaspeed to exit from EDIT mode and the program will be stored in the non volatile memory. If there is any error in storing the program, the message EAR 1 will be displayed and the Synaspeed will lockout to prevent it from running with an incorrect program. SYNATEL should be contacted if this occurs.

### PROGRAM - FACTORY SETTINGS

The unit is supplied with the following settings:-

<b>SP-01</b>	00000	Tachometer
<b>SP-02</b>	01.000	1:1 Scale Ratio
<b>SP-03</b>	0000.5	0.5 second Measurement Period
<b>SP-04</b>	0002.5	2.5 second Reset Time
<b>SP-05</b>	00000	Decimal Point Off
<b>SP-10</b>	00000	Overspeed Indication Disabled
<b>SP-11</b>	00000	
<b>SP-16</b>	00010	npn sensor, speed less than 30 Hz

### TECHNICAL INFORMATION - MAINS VERSIONS

Supply In 110 / 240 V AC +10 -15% 3VA MAX UNFUSED  
 Supply Out - Not protected against s/c or overload

### GENERAL INTRODUCTION

This is an enhanced version of the Synaspeed Mk2 which utilises a new algorithm that is capable of measuring speeds of up to 600,000 rpm . It now has programmable reset and update times. Several programmable hardware features have also been included to enable the Synaspeed to interface to various different types of sensor. The program is safely retained in Electrically Alterable ROM which is more reliable than battery backed CMOS RAM. An attempt has been made to simplify the programming by using one pushbutton only and easier calibration setup. The setup is done using a modify rather than start from scratch method so that simply changing one preset can be achieved very quickly.

An alpha-numeric message sequence at power-on displays the type of function selected and any diagnostics errors detected.

The SYNASPEED can operate either as a TACHOMETER or a TIMER with both having the following programmable features :-

- . display scaling factor
- . fixed update time from 0.1 to 99.9 secs
- . reset time from 0.1 to 99.9 secs
- . three decimal point positions
- . overspeed indication
- . minutes & secs or minutes & decimal of minute display

### INSTALLATION - GUIDELINES

To ensure reliable and trouble free operation of the SYNASPEED the following guidelines should be strictly observed.

Failure to do so may cause noise to be injected on to the input signal producing an unreliable, unstable display reading.

In the guidelines stated NOISY CABLES refers to ANY cables that carry MAINS OR are connected to highly inductive loads such as CONTACTORS, RELAYS, DC DRIVES etc.

- .DO NOT RUN** the SENSOR cable, including the supply connections, WITH NOISY CABLES.
- .DO NOT RUN NOISY CABLES** within 2" AROUND the SYNASPEED.
- .DO NOT MOUNT** the SYNASPEED in CLOSE proximity TO highly INDUCTIVE LOADS
- .DO PROVIDE** a CLEAN SUPPLY to the SYNASPEED if possible

**.DO USE** multi SCREENED CABLE to the sensor if RATES of OVER 2000 P.P.M are to be measured OR ALWAYS for a RELUCTANCE SENSOR. The SCREEN should be connected TO the EARTH terminal on the SYNASPEED with ALL other sensor CONNECTIONS including 0V INSIDE the SCREEN.

### INSTALLATION - RELUCTANCE SENSOR

To configure the Synaspeed for use with a reluctance sensor the internal slide switch **S1** must be accessed by removing the Synaspeed electronics from it's DIN housing. To do this first unscrew the Printed Circuit Board retaining screw on the bottom of the unit and then prise off the rear panel by pushing down gently on each of four panel retaining clips in turn. The electronics assembly can then be slid from the enclosure until the switch **S1** can be seen. In normal use this will be set to position 1 but **MUST** be moved to position 0. The Synaspeed should then be reassembled in the reverse order. On programming the Synaspeed, the preset **SP-16** **MUST** be set to 0001 to enable the reluctance proximi input.

(5)

Nominal 13.9 V DC at No Load 0.4V ac ripple  
 10.6 V DC at Load of 90mA 0.8V ac ripple  
 12.2 V DC at Load of 45mA 0.6V ac ripple

Connections ( also shown by a label on rear panel)

M	Neutral	1
A	110 V	2
I	240 V	3
N	Earth	4
S		

Sensor Supply Output		
0V		5
12 V		6
No Connection7		
Sensor Input		8

### Input Details

#### IN1 - Counter Input

NPN  
 active :- lo 5.0 V 34% x Supply Out  
 hi 8.0V 55% x "  
 impedance 3.9 K ohms to + 12 V

#### PNP

active:- hi 7.9 V 54%  
 lo 5.4 V 37%  
 impedance 7.8 K ohms to 0 V

### RELUCTANCE

active:- hi 10mV  
 impedance 7.8 K ohms to 0 V

**FILTER** - based on 50/50 duty ie a square wave  
 lo speed lower than 30 Hz  
 hi speed lower than 10 KHz

Accuracy  
 based on quartz crystal +-0.1% of scale  
 temp stability 50 ppm/degreeC

### TECHNICAL DETAILS - DC Version

Supply In 10 to 30 Volts DC @ 200 mA with no sensor load.  
 Supply Out - based on input voltage but is regulated to 12 volts. Power rating of the internal regulator is 1/4 Watt, hence for the maximum current output for



Maximum Input Rate 5000 pulse per min  
 Display Required 5000  
 Overspeed Display Off  
 Indicate 0 below 20ppm  
 Min. Update Time 0.5 seconds

Program Sequence **SP-01** 00000  
**SP-02** 01.000  
**SP-03** 0000.5  
**SP-04** 0003.0  
**SP-05** 00000  
**SP-10** 000000  
**SP-16** 00000

Step 1 - Calculate the Scale Ratio for **SP-02**

No modifications are required to the display value because it has no decimal point

Hence:-

DISPLAY = 5000  
 RATE = 5000

& Therefore

**SCALE RATIO** = **DISPLAY / RATE**  
 = 5000/5000  
 = 1

& adjust to 5 digits with decimal point

**SP-02** = 01.000

Step 2 - Convert reset time from ppm to seconds for **SP-04**

**RESET TIME** = **60 / RATE**  
 = 60/20  
 = 3 seconds

& adjust to 5 digits with decimal point

**SP-04** = 0003.0

Comments

Since this is a medium speed application we recommend that the sensor connections be run in screened cable.

Application Tachometer  
 Sensor Type Reed Switch Flowmeter  
 Detecting Magnetic Impeller 1 rev = 1 litre  
 Maximum Input Rate 25 pulse per min

Display Required 200 (ft/min)  
 Overspeed Display 180 (ft/min)  
 Indicate 0 below 10 (ft/min)  
 Min. Update Time 1 second

Program Sequence **SP-01** 00000  
**SP-02** 00.382  
**SP-03** 0001.0  
**SP-04** 0002.3  
**SP-05** 00000  
**SP-10** 000180  
**SP-11** 000178  
**SP-16** 00000

Step 1 - Calculate the Scale Ratio for **SP-02**

Hence:-

DISPLAY = 200  
 RATE = 523.4

& therefore

**SCALE RATIO** = **DISPLAY/RATE**  
 = 200/523.4  
 = 0.3821

& adjust to five digits with decimal point rounding if required to 3rd place of decimal

**SP-02** = 00.382

Step 2 - Convert Reset time from display units to seconds

Note that is different method for obtaining the reset time since it has been stated in display units in this instance ft/min so we have to work backwards to obtain the time

Input RATE required to produce display of 10.0

**RATE** = **RESET VALUE/SCALE RATIO**  
 = 10.0/0.382  
 = 26.12

**RESET TIME** = **60 / RATE**  
 = 60/26.12 = 2.29  
 = 2.3

Hence **SP-04** = 0002.3

Comments

Since the input is an opto-isolator you could select either an npn or pnp. We would suggest, however, that the npn is used due to it's lower impedance. In this instance the isolator emitter and collector should be connected to 0 V and IN1 respectively. The filter must be set to hi speed.

Hence **SP-16** = 00000

Application Oven Timer in Minutes and Seconds  
 Sensor Type PNP Inductive Sensor on Conveyor Drive Maximum  
 Input Rate 6 pulse per minute  
 Display Required 25 minutes 25 seconds

Display Required 25.0 (litres/min) ie 1 place of decimal  
 Overspeed Display 20 ppm  
 Indicate 0 below 2 ppm  
 Min. Update Time 5 seconds

Program Sequence **SP-01** 00000  
**SP-02** 01.000  
**SP-03** 0005.0  
**SP-04** 0030.0  
**SP-05** 00001  
**SP-10** 00020.0  
**SP-11** 00019.8  
**SP-16** 00010

Step 1 - Calculate the Scale Ratio for **SP-02**

Modify the display value by removing the decimal point

Hence:-

DISPLAY = 25.0  
 RATE = 25

& therefore

**SCALE RATIO** = **DISPLAY/RATE**  
 = 25.0/25  
 = 1

& adjust to five digits with decimal point

**SP-02** = 01.000

Step 2 - Convert the Reset time from ppm to seconds for **SP-04**

**RESET TIME** = **60 / RATE**  
 = 60 / 2  
 = 30

& adjust to 5 digits with decimal point added

**SP-04** = 0030.0

Step 3 - Determine position to force decimal point for **SP-05**

required display 25.0 so decimal point is 1 from right hand end

& hence

**SP-05** = 00001

Comments

Since the input is a contact closure you could select either an npn or pnp. We would suggest, however, that the npn is used due to it's lower impedance. The filter must be set to lo speed to eliminate the contact bounce.

Hence **SP-16** = 00010

Application Tachometer  
 Sensor Type Optomax Reflex PE, Opto output  
 Detecting 2 Holes per rev in disc on conveyor drive  
 Maximum Input Rate 523.4 pulse per min

Overspeed Display Off  
 Indicate 0 below 1 pulse per minute  
 Min. Update Time 15 seconds

Program Sequence **SP-01** 00001  
**SP-02** 0152.4  
**SP-03** 0015.0  
**SP-04** 0060.0  
**SP-05** 00002  
**SP-10** 000000  
**SP-11** 000000  
 SP-16 00011

Step 1 - Calculate the Scale Ratio for **SP-02**

Convert the DISPLAY time to 1/10 's of minute

DISPLAY = 25.0 + 25/60 = 25.0 + 0.4167 = 25.4

Hence

**SCALE RATIO** = **DISPLAY X RATE**  
 = 25.4 X 6  
**SP-02** = 152.4

Step 2 - Convert the Reset time from ppm to seconds for **SP-04**


**RESET time** = **60/RATE** = **60/1**  
 = 60  
**SP-04** = 60.0

Comments

As the input on this is very slow the lo speed filter could be used to prevent electrical noise from creeping into the signal even though this is a solid state sensor.

Note that as soon as the Timer is selected, the decimal points in the Scale Factor **SP-02**, final display Decimal Point Position **SP-05** and the overspeed presets **SP-10 / SP-11** are automatically set. These can be over-written to produce obscure scaling if required.

## SENSOR CONNECTIONS FOR SYNACOUNT/SYNASPEED MKIII







### SYNASPEED/SYNACOUNT MKIII


#### Connections

- |             |           |
|-------------|-----------|
| 1 - Neutral | 5 - 0v    |
| 2 - 110v    | 6 - +12v  |
| 3 - 230v    | 7 - Reset |
| 4 - Earth   | 8 - Count |





#### NPN Input. SP16=XX00 S1=1

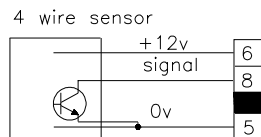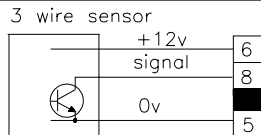


Reset Input  
(NPN/contact closure only.)  
Slow speed - 30Hz



#### PNP Input. SP16=XX01 S1=1

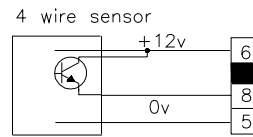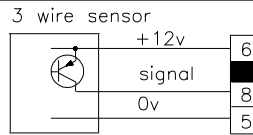

#### Flowmeter. SP16=XX01 S1=0



Dimensions: 96 x 48mm (front face). 109mm deep inc. 5mm for front bezel.  
Connector block extra 12.5mm deep. Panel cutout: 92 x 44mm.